

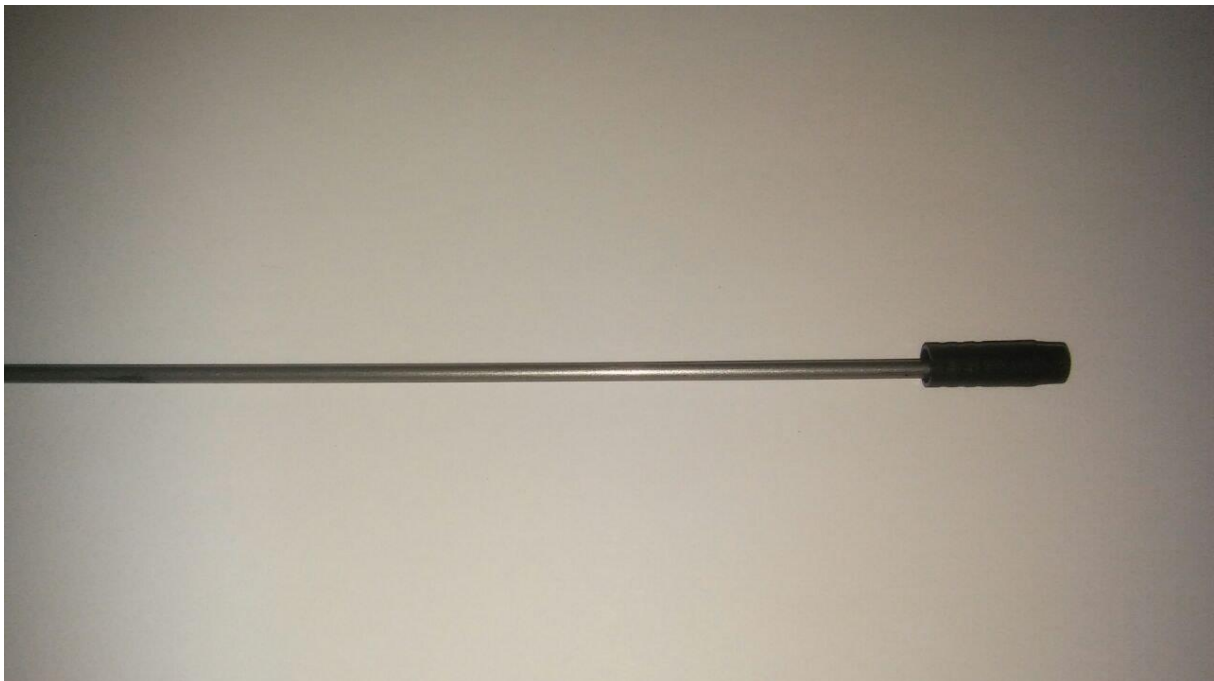



## End-cap installation on the cable housing

To install the end-caps properly, you need to ensure, so that cable housing gets inside till the very bottom. First, please, measure the depth of the end-cap:

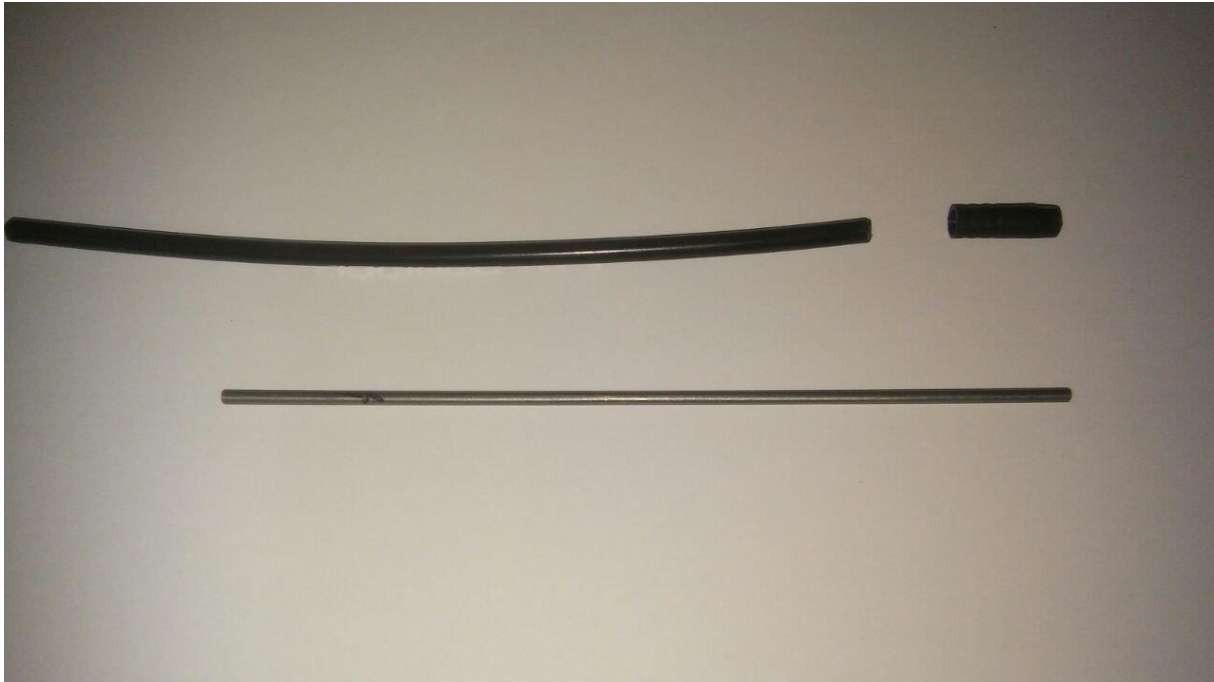


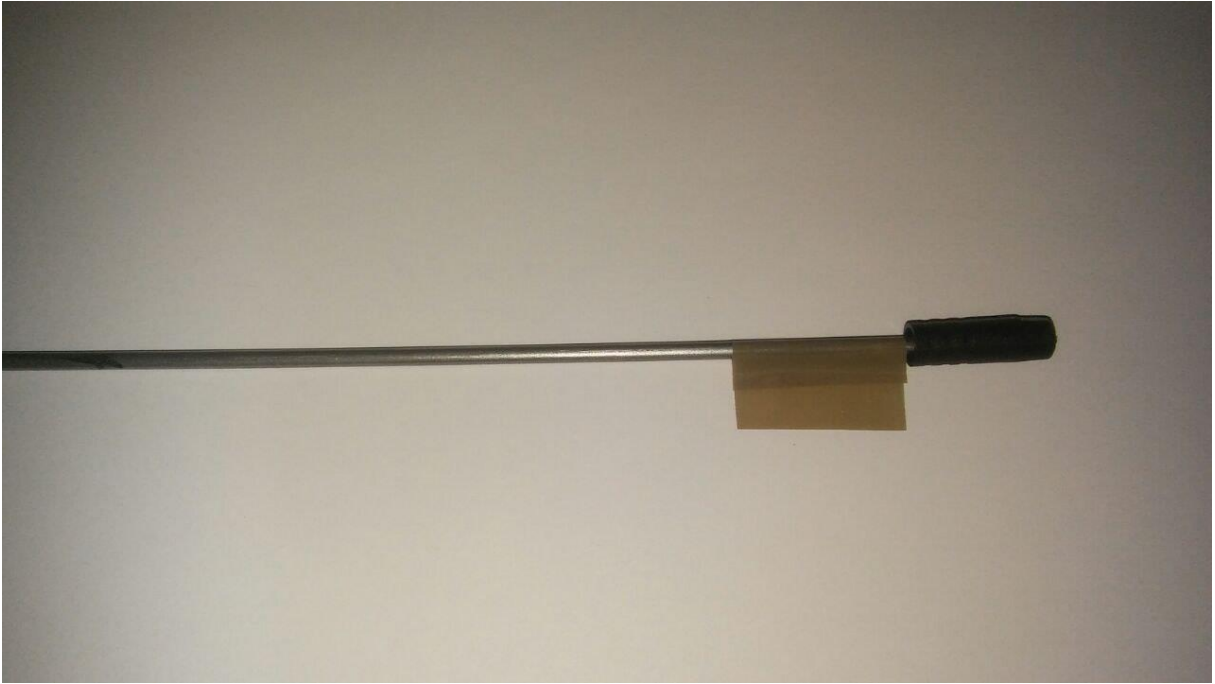

In the next step, please, shift this measurement on the cable housing:

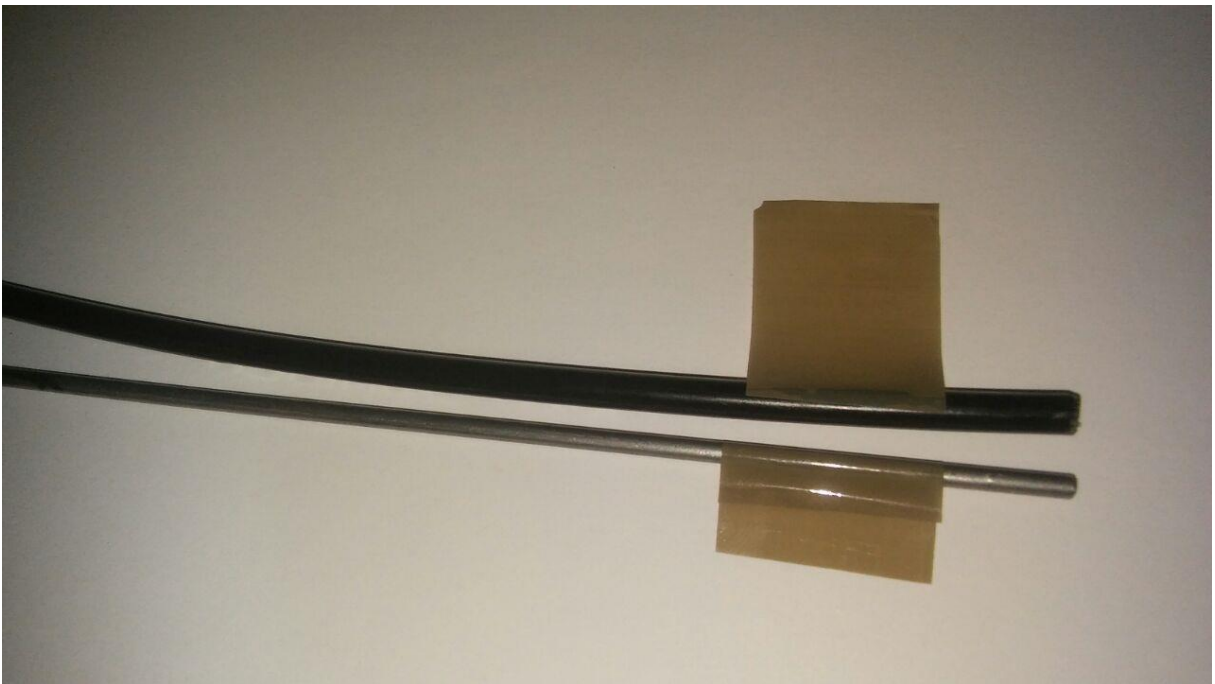

At the very end, press the cable housing into the end cap till the mark that you made (which may require a firm grip, maybe even a vise):

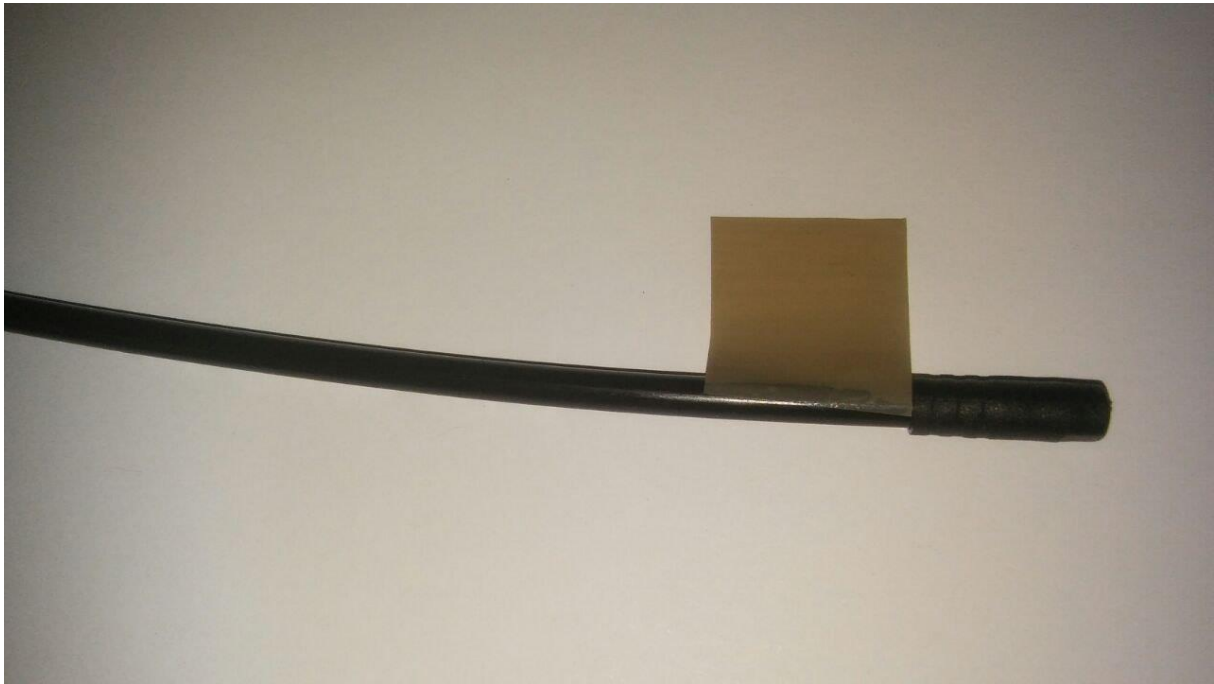

Below you can see an example of a vise used for this operation:



The depth of end-caps is either 12.2mm (product of Jagwire, symbol CM007 / BOT007, with seal inside) or 15.2mm (Jagwire BOT115-4F, without seal).

If you experience any other problem in the process of cable change, please, ask a professional workshop for help or contact us at [wiktor@efneo.com](mailto:wiktor@efneo.com) (if photos would make communication easier, please, put them into email).